

**M2I Corporation**

Industrial HMI Touch Panel

TOPRT(W)-Ex Series

Hardware Manual

Thank you for purchasing the industrial HMI touch panel series of M2I corporation.

Please read this manual carefully to know installing, wiring, operating this equipment for safe use of this product.

The TOPRT(W)-Ex described in this manual has been manufactured in accordance with the Industrial Safety and Health Act, Article 84 (Safety Certification), Enforcement Decree Article 74, Enforcement Rules Article 110, Paragraph 1, and the Safety Certification Notice for Protective Devices (Ministry of Employment and Labor Notice No. 2021-22). It is hereby certified that the product meets these standards. Customers are advised to carefully review and familiarize themselves with the explosion-proof information provided in this manual before use.





Index

Index	2
Chapter 1 Safety Precautions.....	3
Chapter 2 Overview	6
2.1 Introduction of Products.....	6
2.2 Package Contents.....	6
2.3 Explanation of Model name	6
Chapter 3 General Specifications	7
3.1 Power Specifications	7
3.2 Memory Specifications.....	7
3.3 Display Specifications	7
3.4 Touch Specifications.....	7
3.5 Sub Function Specifications.....	7
3.6 Wireless Communication Specifications	7
3.8 Environment Specifications.....	8
3.9 Structure Specifications	8
Chapter 4 Parts Identification and Functions.....	9
4.1 TOPRT(W)-Ex Series.....	9
Chapter 5 Interface	11
5.1 Serial Interface	11
5.2 Ethernet Communication Specifications	13
5.3 USB Specifications.....	14
5.4 AUDIO Specifications.....	14
5.5 HDMI Specifications	14
Chapter 6 Installation	15
6.1 Installation Requirements.....	15
6.2 Install Procedure	16
6.3 Front USB	17
Chapter 7 Wiring	18
7.1 Power Cable Wiring.....	18
Chapter 8 Maintenance	20
8.1 Cleaning the Display	20
8.2 Periodic Check Points.....	20
8.3 Problems with the Device.....	20
8.4 Setting System Recovery Mode.....	21
Chapter 9 Products and Warning Label Location	21











Chapter 1 Safety Precautions

■ Before using the product

To use the product safely and effectively, please read the contents of this manual thoroughly before use. Please keep to the safety precaution, for it is to prevent accidents and potential danger from occurring. Safety precaution is classified into 'Warning' and 'Caution' and their meanings are as follows. Also, the indicated illustrations on the product and in the manual have the following meanings.






 Warning	Violating the instruction may result in serious personal injury or death
 Caution	Violating the instruction may result in slight personal injury or product damage
	Be cautious, for danger may be present
	Be cautious, for there is a possibility of an electric shock

■ Anti-Explosion(Ex) related Precautions **Warning**

-  All cables connected with the product should not be connected or disconnected in explosive atmosphere.
-  Do not open, maintain or service in an area where an explosive atmosphere.
-  Do not change SD Card when the power is connected to product.
-  All cables connected with the product should not be connected or disconnected when power is on.
-  Touch the device after wiping the front panel with a damp cloth or wearing anti-static gloves to avoid the electrostatic charges.
-  This equipment is suitable for use in Class I, Division 2, Groups A, B, C and D or non-hazardous locations only.
-  This equipment is an open-type device and back of the equipment is meant to be installed in an enclosure suitable for the environment such that the equipment is only accessible with the use of a tool.
-  Batteries must only be changed in an area free of ignitable concentrations.
 - LES BATTERIES NE DOIVENT ÊTRE CHANGÉES QUE DANS UNE ZONE EXEMPT DE CONCENTRATIONS INFLAMMABLES.
-  Do not remove or replace while circuit is live unless the area is free of ignitable concentrations.
 - NE PAS RETIRER OU REMPLACER TANT QUE LE CIRCUIT EST SOUS TENSION, À MOINS QUE LA ZONE NE SOIT EXEMPLE DE CONCENTRATIONS INFLAMMABLES.
-  Do not disconnect while the circuit is live or unless the area is free of ignitable concentrations.
 - NE PAS DÉCONNECTER LORSQUE LE CIRCUIT EST EN TENSION OU À MOINS QUE LA ZONE SOIT EXEMPT DE CONCENTRATIONS INFLAMMABLES.

■ General Precautions **Caution**

Do not install the location which exceeds allowed temperature. Product can be damaged or shorten the life. Especially Install environment as below should be avoided.

-  Do not press the screen with a hard or sharp object(awl, screwdriver, pen) with too strong a force. It may cause malfunction of touch due to damage of the front sheet.
-  Do not use or store in an environment with high vibration.
-  Do not allow foreign objects such as water, liquids, or metal powders to enter the product. This may cause breakage or electric shock.
-  Use the radio or mobile phone at least 30cm away from the main unit.
-  Two or fewer bright spots may appear on the LCD screen, and certain areas may appear brighter, but this is not a defect in LCD characteristics.

- ⊘ Do not store or operate in direct sunlight. Direct sunlight can change the properties of the LCD.

WARNING – DO NOT CONNECT OR DISCONNECT WHEN ENERGIZED. or equivalent.

AVERTISSEMENT – NE PAS CONNECTER OU DÉCONNECTER LORSQUE L'ÉQUIPEMENT EST SOUS TENSION.

■ Specific Condition of Use Warning

- ⊘ The equipment shall only be used in an area of at least pollution degree 2, as defined in IEC/EN 60664-1.
- ⊘ Equipment shall be installed in a back enclosure with tool removable door or cover that provides a degree of protection not less than IP 54 in accordance with IEC/EN 60079-0.
- ⊘ The equipment shall only be installed in locations where there is a low risk of mechanical damage.
- ⊘ External connections to the equipment, including the front USB port must not be inserted or removed unless either the area in which the equipment is installed is known to be non-hazardous, or the circuits connected have been de-energized.
- ⊘ External connections to the equipment must be secured using the mechanical securing devices provided adjacent to connection to prevent unintentional separation.
- ⊘ Provisions shall be made to prevent the rated voltage from being exceeded by transient disturbances of more than 140%.

■ Design Precautions

Install protection circuit on the outside of Products to protect the entire control system when external power supply or Products have problems.

- ❗ As the malfunction & incorrect result of Products could damage the stability of the entire systems and human body, you must install damage preventing interlock circuit such as emergency stop, Protective circuits, positioning upper and lower limit switch and interlock for forward/reverse operation.
- ❗ When computer or other controllers communicate and exchange data with products or change operation mode of products, set up protective sequence program in PC or Controller for protecting system from communication error.
- ❗ The output signal or communication lines should be separated from the power line or high-tension wire. They should be installed 100mm (3.94 Inch) or more from each other.

■ Wiring Precautions Warning

- ❗ Be sure the wiring is done correctly by checking the product's rated voltage and the terminal layout. Incorrect wiring could result in fire, damage or malfunctions.
 - ❗ Tighten the terminal screw with the specified torque. If the screws of terminal are loose, it could result in short circuit, fire, malfunctions.
- FG Terminal must be used a dedicated ground. Not doing so could result in malfunctions.
- ❗ a. Grounding should be the Class 3 grounding. The cable for grounding should be more than 2mm².
 - ❗ b. grounding point be closed to the products and make short the distance to the ground cable if possible.

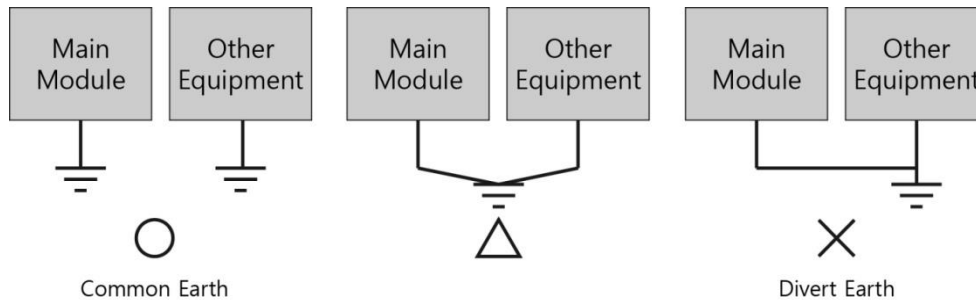


Fig. Grounding Example Diagram

■ Installation Precautions

Do not install the location which exceeds allowed temperature. Product can be damaged or shorten the life. Especially Install environment as below should be avoided.

- ⊘ Do not Install product to the place which the ambient temperature is out of limits, from -10 ~ 50°C or on the surface of control board which high pressure equipment is installed.
- ⊘ Do not install to the place where strong shock or vibration continuously have impacted on product.
- ⊘ Do not store or operate in direct sunlight. Direct sunlight can change the properties of the LCD.
- ⊘ For indoor use only.
- ⊘ Use the product under 2000M altitude.

■ Disposal Precaution

When you dispose of product and battery, please treat it as industrial waste. It can create poisonous substances or explosion.

■ Battery Specification Caution

- ⊘ A CR2032 internal battery on Mainboard cannot be replaced by the user. If the battery has run out of service, please contact our Customer Support Center for replacement and inspection.

Item	Information
Voltage and capacity	DC 3.0V, 225mAh
Model name and manufacturer	CR2032(Lithium Battery), Panasonic
Lifetime	More than 2 years (In case of ambient temperature 25°C)

* The specifications are subject to change depending on the model.

- All field-wiring connections to this unit shall be from Limited Voltage / Limited Current, below 20 ~ 28Vdc isolated secondary source with an output fuse, or Class 2 secondary circuits.

Chapter 2 Overview


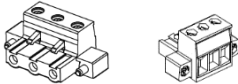 
 
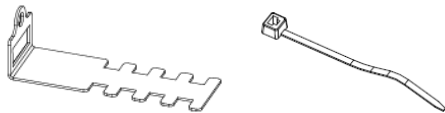 
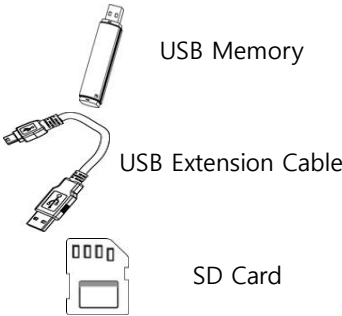
2.1 Introduction of Products

This industrial HMI touch panel is an industrial control device required in industrial field. It is a device based on RS-232C and RS-422/485, Ethernet which is used for the basic purpose of communication with another device(PLC).

2.2 Package Contents

The components of the product are as follows.

Before using the product, please check that all of the following components are included.

Item	Figure	Quantity
Product and User Manual		Each 1
Power Connector and COM3 communication connector		Each 1
Mounting Clamp		12
Cable Clamp and Cable Tie		HDMI: 1 USB: 2
Accessories (Sold separate)	 <div> <p>USB Memory</p> <p>USB Extension Cable</p> <p>SD Card</p> </div>	User Options

2.3 Explanation of Model name

Series	Screen Size	Option	Resolution	Power	Anti-Explosion	Blank	Etc
TOPRT(W)- Ex	15: 15.0" 19: 18.5"	50: Standard	W: WXGA (1366x768)	D: DC	Ex: Explosion proof or special model Blank: Non-explosion proof or general model		*□□□: Not related to anti-explosion, show as blank, digits, or letters 01: Wi-Fi, BT spec exclusion

* 01: Not support Wi-Fi and Bluetooth

Chapter 3 General Specifications

3.1 Power Specifications

Rated voltage	DC 24V, Class2	
Input Voltage Range	DC 20~28V, Class 2	
Power Consumption	TOPRT1550WD-Ex	40W
	TOPRT1550WD-Ex 01	
	TOPRT1950WD-Ex	
	TOPRT1950WD-Ex 01	
Voltage endurance	DC 24V, within 10ms	
Insulation Resistance	500V DC, 10MΩ	

3.2 Memory Specifications

Screen Memory	128MB
Backup Memory	512KB: System buffer(10K Word),Including Alarm/Log/Recipe
Backup Period	Permanent
Real Time Clock	Built in(by Battery)

3.3 Display Specifications

Color	16M Colors
Brightness Level	10 Level(by software)
Backlight Type	LED
Backlight Life	50,000 hours
Display Font	MS Windows Vector font possible Image font
Front LED Indicate	Built in

3.4 Touch Specifications

Touch Type	Capacitive Touch Sensor
------------	-------------------------

3.5 Sub Function Specifications

Front Camera	Built-in, Resolution: VGA(640*480)
Proximity Sensor	Built-in, Sensing Distance 0.7M
HDMI Output	HDMI V2.0, Max 1366 x 768
AUDIO Output	3.5mm AUDIO JACK Output

3.6 Wireless Communication Specifications (Not applicable to the 01 model)

IrDA	Compliant to IrDA physical layer standard up to 115.2kbit /s(SIR), 0.7M@ Open space communication, M2I HMI dedicated communication	
Bluetooth	Spectrum Band	2402Mhz ~ 2480Mhz
	Standard	Bluetooth® 5.0 Low Energy (BLE)
	Transmit Speed	1Mbps@Typ
	Maximum Power	+0.55dBm (Including Antenna gain)
	Operation Area	5M or more (*flat-ground communication)
	Security (*AP Setting)	WEP(64/128), WPA-PSK+(TKIP, AES), WPA2-PSK+(TKIP, AES) *AES Recommend

Wi-Fi	2.4 GHz	Freq. Range	2400Mhz ~ 2483.5Mhz
		Standard	IEEE 802.11b/g/n Wi-Fi compliant
		Spectrum Band	20/40 MHz
		Transmit Speed	300Mbps@Max
	5 GHz	Freq. Range	5150Mhz ~ 5725Mhz
		Standard	IEEE 802.11a/n Wi-Fi compliant
		Spectrum Band	20/40MHz
		Transmit Speed	300Mbps@Max
	Maximum Power		2.4G: +6.38dBm (Including Antenna gain) 5G: +15.02dBm (Including Antenna gain)
	Operation Area		20M 이상 (*flat-ground communication)
	Security (*AP Setting)		WEP(64/128), WPA-PSK+(TKIP, AES), WPA2-PSK+(TKIP, AES) *AES Recommend

3.7 Antenna Information (Not applicable to the 01 model)

Gain	2.4GHz: Peak gain -6.02dBi, 5GHz: Peak gain +2.98dBi
Antenna Type	Internal Antenna

3.8 Environment Specifications


Operation Temperature(°C)	-10 ~ +50
Storage Temperature(°C)	-20 ~ +60
Operation Humidity(%RH)	0 ~ 90(No dew)
Atmosphere	No corrosive gas
Vibration Endurance	Amplitude: 10≤F < 25Hz(2G) X,Y,Z each direction(for 30 minutes)
Noise Immunity	1000Vp-p(Pulse width 1μs)
Static Electricity Discharge	Connective discharge from EN61000-4-2: ±4kV
Shock Endurance	10G X,Y,Z each direction(for 3 times)
Ground Connection	Class 3(Under 100Ω)
Protection Classification	Front IP54

3.9 Structure Specifications


Model	TOPRT1550WD-Ex TOPRT1550WD-Ex 01	TOPRT1950WD-Ex TOPRT1950WD-Ex 01
Weight (Kg)	4.10	5.30
Cooling System	Natural air circulation	
Case Material	Aluminum + Plastic	

Chapter 4 Parts Identification and Functions

4.1 TOPRT(W)-Ex Series

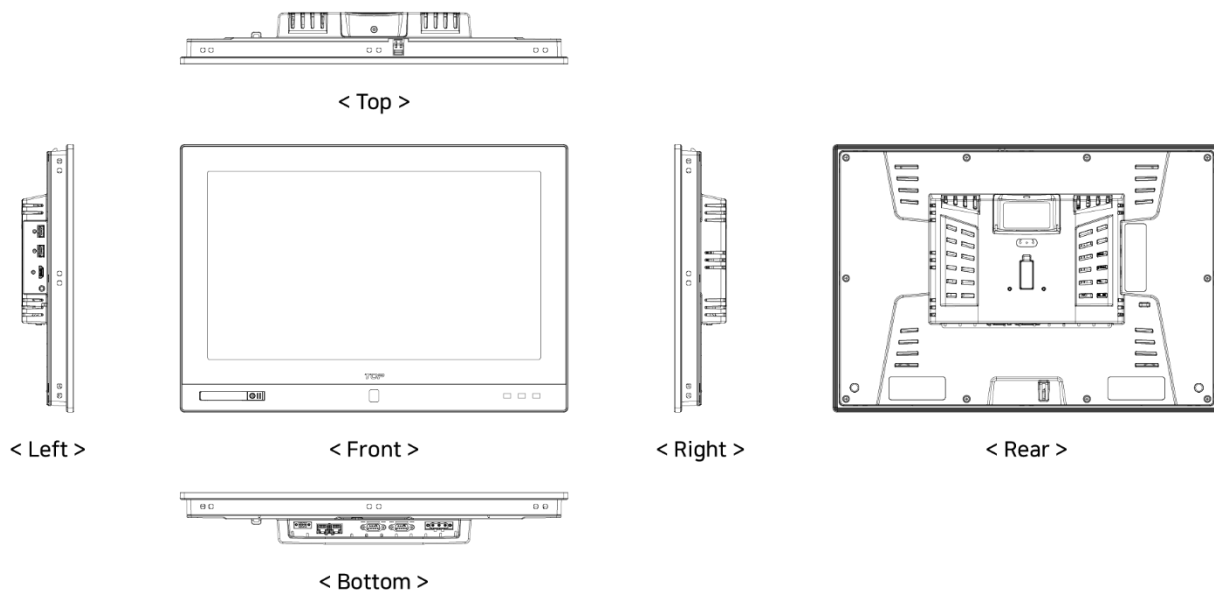


4.1.1 External Dimension

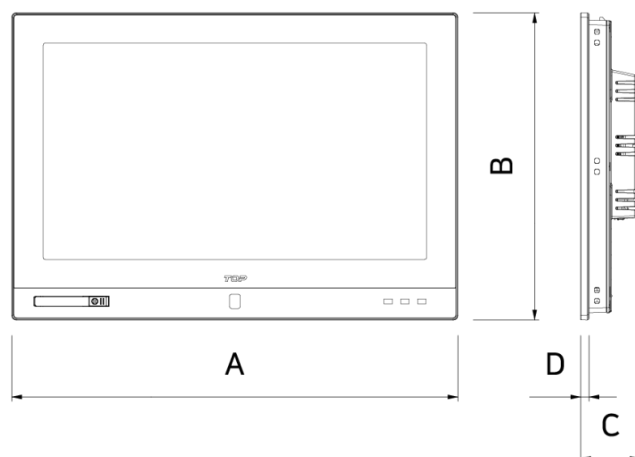

(mm)


모델명	A	B	C	D
TOPRT1550WD-Ex TOPRT1550WD-Ex 01	406.4	286.4	63.5	7
TOPRT1950WD-Ex TOPRT1550WD-Ex 01	477.4	328.4	63.5	

4.1.2 Front Part Names and Specifications

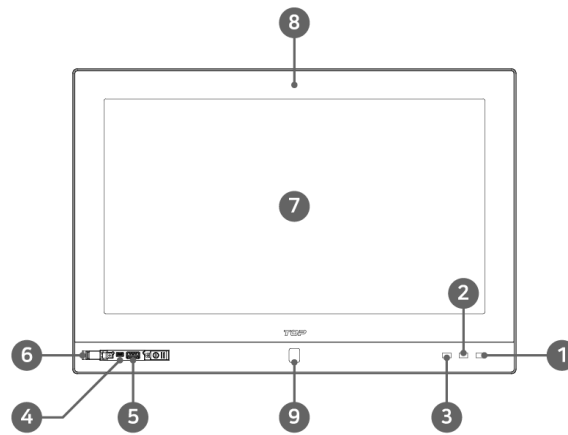


No.	Title	Description
①	Power LED	System power status LED
②	IrDA Sensor	Communication device for dedicated product
③	Proximity Sensor	Automatically backlight ON/OFF by sensing object coming
④	USB OTG	Project file upload/download (*Internal program managing purpose)
⑤	USB HOST	USB Connector, 5V/0.5A output
⑥	Front USB Cover	Front USB Cover(*Internal program managing purpose)
⑦	LCD	TFT 16M Color LCD
⑧	Touch Panel	Capacitive touch sensor
⑨	Camera	Resolution: VGA(640*480)

4.1.3 Rear Part Names and Specifications

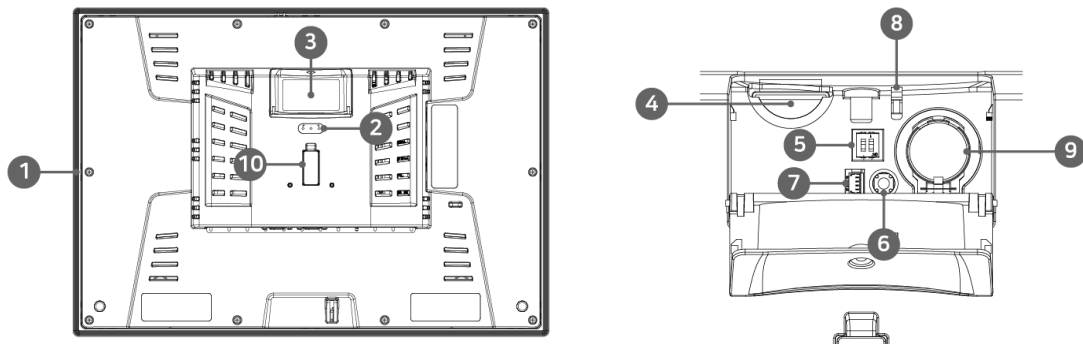


No.	Title	Form	Description
①	Rubber Gasket	-	Shock absorbing and IP specifying silicon gasket
②	LED Indicator	3개	Power, Operation, Communication status display
③	SD Card Cover	Plastic Cover	SD Card, Reset switch, Mode switch, CR2032 battery
④	SD Card Socket	SD Socket	Project or Log data file upload/download
⑤	Mode Switch	DIP Switch 2pole	System mode setting switch
⑥	Reset Switch	Tact Switch	System reset switch
⑦	Diagnosis Connect	2mm 4P	System diagnosis (Manufacturer use only)
⑧	Cover Sensor	Photo coupler	Cover open/close sensing
⑨	RTC Battery	CR2032	RTC battery
⑩	Ext. Module Connector	-	Extension module install connector's cover

4.1.4 Side Part Names and Specifications

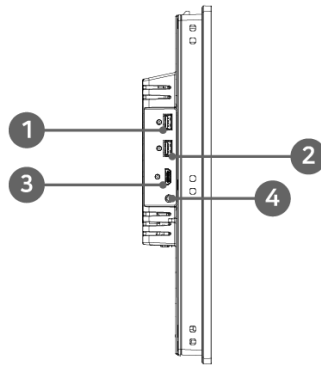

No.	Title	Form	Description
①	USB HOST #1	Type A	Connector #1 for USB saving options
②	USB HOST #2	Type A	Connector #2 for USB saving options
③	HDMI	Standard HDMI	HDMI Output, external display device connection (TV/Monitor)
④	AUDIO	3.5mm Audio Plug	AUDIO output, external speaker connection

4.1.5 Bottom Part Names and Specifications

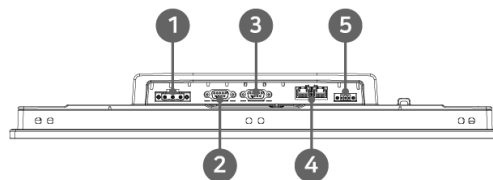

No.	Title	Form	Description
①	Power Terminal	TB 7.6mm 3P	Power supply for product
②	Serial COM1	DSUB9	RS-232C/422/485 serial comm. (select by software)
③	Serial COM2	DSUB9	RS-232C/422/485 serial comm. (select by software)
④	ETHERNET Connector	RJ45 x 2ch	10BASE-T/100BASE-TX/1000BASE-T, Auto-MDIX
⑤	Serial COM3	TB 3.5mm 3P	RS-485 serial communication connector

Chapter 5 Interface

In order for the main unit to communicate with an external device, it is necessary to connect the two devices by referring to the following.

5.1 Serial Interface

5.1.1 RS-232C


Item	Description
Protocol	Full Duplex
Synch.	Asynchronous
Communication Distance	about 15m
Type of connection	1:1
Control Code	ASCII Code or HEXA Code

Baud Rate		2400, 4800, 9600, 19200, 38400, 57600, 76800, 115200bps
Data Type	Data Bit	7, 8bit
	Parity Bit	NONE, ODD, EVEN Parity
	Stop Bit	1, 2bit
Connector		DSUB 9pin

5.1.2 RS-422/485


Item		Description
Protocol		Full Duplex / Half Duplex
Synch.		Asynchronous
Communication Distance		about 500m
Type of connection		1:N (N≤31)
Control Code		ASCII Code or HEXA Code
Baud Rate		2400, 4800, 9600, 19200, 38400, 57600, 76800, 115200bps
Data Type	Data Bit	7, 8bit
	Parity Bit	NONE, ODD, EVEN Parity
	Stop Bit	1, 2bit
Terminating Resistors		100/120Ohm (select by software)
Connector		DSUB 9pin

 5.1.3 COM1 Connector pin number and Signal name

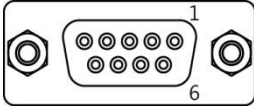
Type	Pin No.	Signal	Direction	Description
9Pin Female 	1	RDA(RD+)	Input	RS-422/485 Receive Data(+)
	2	RD(RxD)	Input	RS-232C Receive Data
	3	SD(TxD)	Output	RS-232C Send Data
	4	RDB(RD-)	Input	RS-422/485 Receive Data(-)
	5	²⁾ SG	-	Signal Ground
	6	SDA(SD+)	Output	RS-422/485 Send Data(+)
	7	¹⁾ Power	-	+5V, 0.2A
	8	N.C	-	N.C
	9	SDB(SD-)	Output	RS-422/485 Send Data(-)

* 1) 2) If VCC is required for an external device, connect pin 7(+ 5.0V) and pin 5. (* 0.2A output)

 5.1.4 COM2 Connector pin number and Signal name

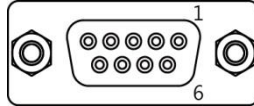Type	Pin No.	Signal	Direction	Description
9Pin Female 	1	RDA(RD+)	Input	RS-422/485 Receive Data(+)
	2	RD(RxD)	Input	RS-232C Receive Data
	3	SD(TxD)	Output	RS-232C Send Data
	4	RDB(RD-)	Input	RS-422/485 Receive Data(-)
	5	SG	-	Signal Ground
	6	SDA(SD+)	Output	RS-422/485 Send Data(+)
	7	RTS	Output	RS-232C Request to Send
	8	CTS	Input	RS-232C Clear To Send
	9	SDB(SD-)	Output	RS-422/485 Send Data(-)

 5.1.5 COM3 Connector pin number and Signal name

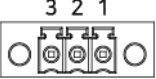Type	Pin No.	Signal	Direction	Description
	1	D+	IN/OUTPUT	RS-485 Data (+)
	2	D-	IN/OUTPUT	RS-485 Data (-)
	3	SG	-	Signal Ground

* Be sure to connect the RD and SD to the RS-232C communication line by crossing each other with a Twisted Pair Cable. Please connect SG directly.

* RS-422/485 communication line must use RDA and RDB as Twisted Pair Cable, SDA and SDB as Twisted Pair Cable.


* Communication cable's Shield cable cannot be used as communication ground. It can cause communication error.

5.2 Ethernet Communication Specifications

5.2.1 Ethernet

Item	Description
Ethernet Method	IEEE 802.3, IEEE 802.3u, IEEE 802.3z, IEEE 802.ab, 10BaseT/100BaseT/1000BaseT
Speed	10M / 100Mbps / 1000Mbps
Communication Method	Base Band
Switching Method	AUTO MDIX
Maximum Segment Length	100M (between Hub)
Communication Cable	UTP (Unshielded Twisted Pair)
Modular Jack	RJ45 x 2ch

5.2.2 RJ – 45 Pin Layout

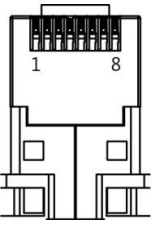
Type	Pin No.	Color	100Base-T	1000Base-T
	1	Orange/White	TD+	DA+
	2	Orange	TD-	DA-
	3	Green/White	RD+	DB+
	4	Blue	-	DC+
	5	Blue/White	-	DC-
	6	Green	RD-	DB-
	7	Brown/White	-	DD+
	8	Brown	-	DD-

* Use UTP cable Cat 5e or Cat 6 for 1Gbps speed use.


* UTP Cable Comparison	Cat 5e	Cat 6
Speed	MAX. 1Gbps	MIN. 1Gbps
Range	100Mhz	250Mhz
Data Loss	Loss increase in 100M	No loss over 100M area

5.3 USB Specifications

 
5.3.1 Front USB Host

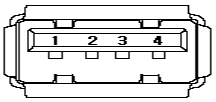Type	Item	Specification
	USB Interface	USB 2.0
	Communication Method	Control/Bulk
	Transfer Speed	Max 480Mb/s
	Support Device	USB Storage (FAT16/FAT32 File format)
	Connector Type	Type A

 
5.3.2 USB Device

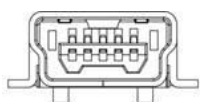Type	Item	Specification
	USB Interface	USB 2.0
	Communication Method	Interrupt/Bulk/Isochronous
	Transfer Speed	Max 480Mb/s
	Supportive OS	Windows 98SE/2000/XP/VISTA/7/10(32/64bit)
	Cable Length	M2I manufacturer's cable is recommended(3M), and 1.5M or less when purchased separately
	Connector Type	Mini USB B, Female
	Connecting Method	Front, USB OTG connector

 
5.3.3 Rear USB Host

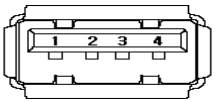Type	Item	Specification
	USB Interface	USB 3.0 (USB 3.2 Gen1 Super Speed)
	Communication Method	Control/Bulk
	Transfer Speed	Max 5Gb/s
	Support Device	USB Storage (FAT16/FAT32 File format)
	Connector Type	Type A (2ch)

5.4 AUDIO Specifications

Type	Item	Specification
	Output Spec.	Stereo audio
	Connector Type	3.5mm Audio Plug


5.5 HDMI Specifications

Type	Item	Specification
 HDMI (FEMALE)	HDMI Version	HDMI V2.0
	Mode Selection	Mirror / Dual
	Resolution	Max 1366 x 768
	Connector Type	HDMI Type A


Chapter 6 Installation Warning

6.1 Installation Requirements

- (1) It should be installed within $-10 \sim 50^{\circ}\text{C}$ and $10 \sim 80\% \text{RH}$, otherwise the screen may be changed or cause malfunction and damage.
- (2) Be sure that heat from surrounding equipment does not cause product to exceed its standard operating temperature.

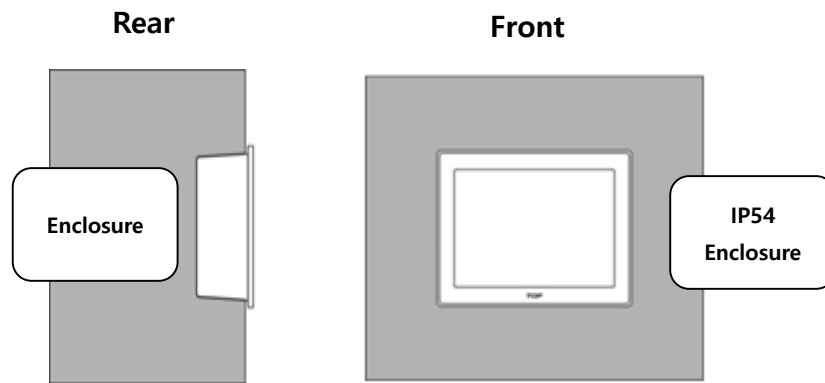

- (3) In order to minimize external mechanical hazards, please control the mechanical hazards of the surrounding environment.

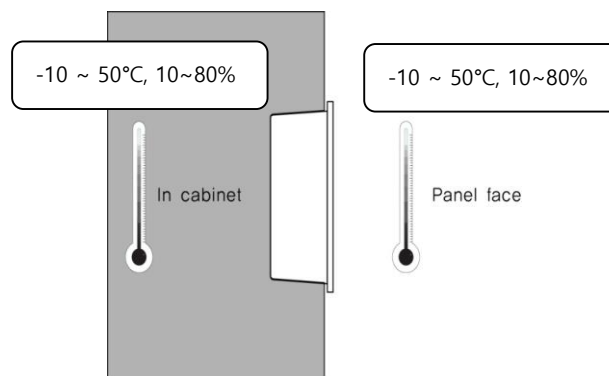


6.2 Install Procedure Warning

Please follow as below explanation to install the product.

6.2.1 Panel Cut-out

Make a panel cut which product is mounted and insert the product to the panel from the front side.

Making the Panel Cut (Mounting Size) per each model as below Table, Before Installation.

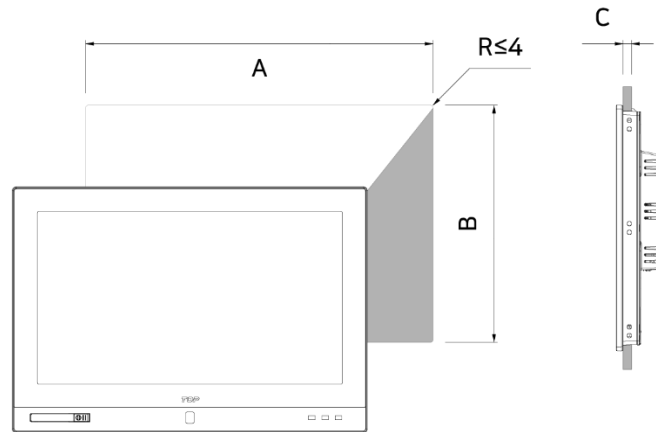


(mm)

모델명	A	B	C
TOPRT1550WD-Ex TOPRT1550WD-Ex 01	392(+0.5/0)	272(+0.5/0)	1.0~5.0(+1.0/0)
TOPRT1950WD-Ex TOPRT1950WD-Ex 01	463(+0.5/0)	314(+0.5/0)	


6.2.2 Fixation

Installation methods should be following by using the supplied Mounting clamps.


- a. Insert the clamp into the slot of the product.

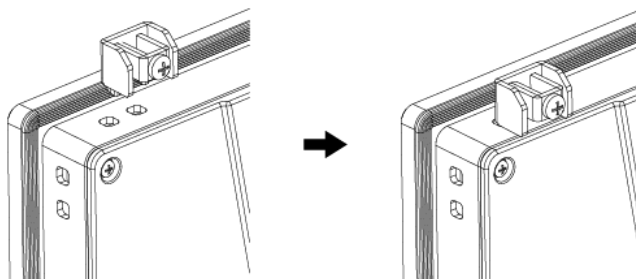


- b. Screw the unit into the panel cut with a screwdriver.

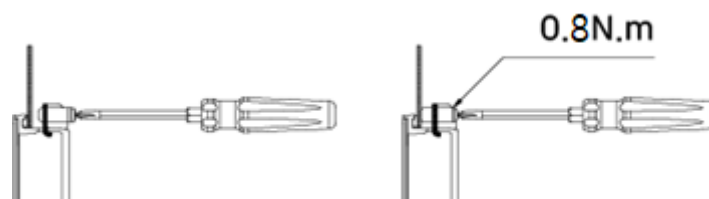

If the clamping screw below is over-tightened, the touch sensor may stop working or malfunction. Tighten to 0.8N.m screwdriver torque.

Caution: IP performance cannot be secured if the clamp is not tightened with a tightening force of 0.8N.m.  Warning

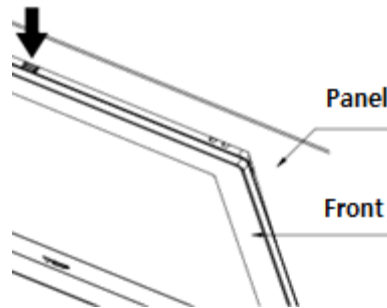

When you detach the product from a panel, please use tools like driver to push a lock part and detaching should be done slowly.


6.3 Front USB

6.3.1 Open / Close of Font USB Cover

(1) When you open a USB cover, you can connect MINI USB B cable.


(2) This cover can be locked and unlocked by making rotation of lock rotary switch.

※ Do not use USB in explosive circumstances. There can be an explosion during operation.

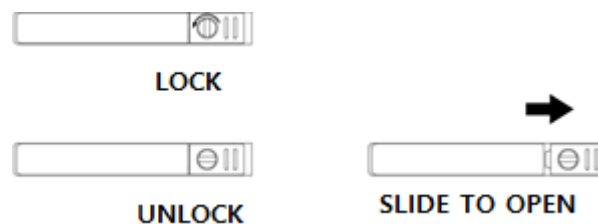

6.3.2 Data Upload and Download


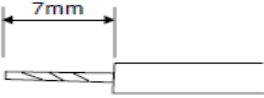 
You can download or Upload Project file data through USB interface.

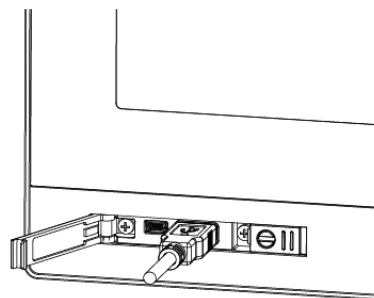

Chapter 7 Wiring Warning

7.1 Power Cable Wiring


(1) The Power cable should have the following specification.

Power Cable Specification	0.75~2.5mm ² (18~12AWG)
F.G Cable Specification	2mm ² (14AWG)
Conductor type	solid or stranded type (use copper conductor only)
Bolt torque	0.4 N.m  Warning
Conductor length	
Temperature rating of the field installed conductors	65°C

(2) The Power terminal should have the following specification.


Caution: The use of the **Pin Terminal(ferrule) when installing the power supply and ground terminal is important for maintaining the performance of the device. Failure to install power and ground using the same **Pin Terminal(ferrule) as below may cause explosion due to spark due to abnormal cable loss. Therefore, please be sure to familiarize yourself with how to use **Pin Terminal(ferrule) below.


** or equivalent

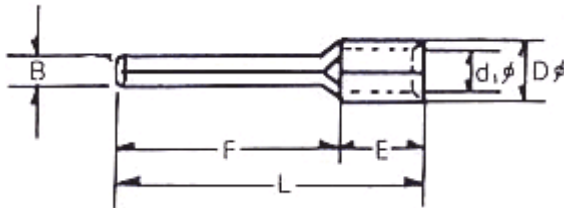

(mm)

B	L	F	E	D	d
1.8~2.0	14~22	8~14	5	3.3~3.8	2~2.5

(3) Wiring of power is as follows.  Warning

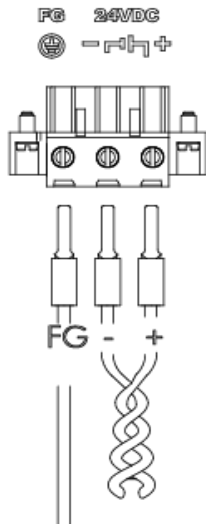

7.2 Ground wiring Warning

(1) The product has enough anti-noise measure, so except that there are many noises.

Specially, the ground is not needed. When doing ground, please refer to the followings.

(2) The ground should be the exclusive ground.

The ground should be type class 3 ground (ground resistor is less than 100Ω).

(3) When not doing the exclusive ground, do common ground like figure B).

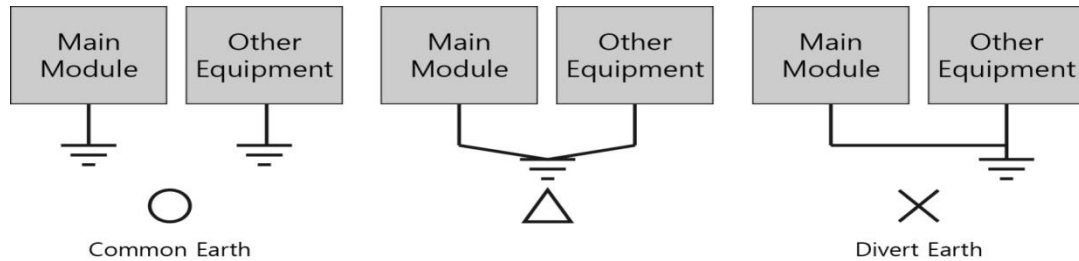



Fig. Grounding Example Diagram

(4) Use the cable more than 2mm^2 . Put the point of the ground near product and shorten Ground line.


7.3 Cable Clamp installation

CAUTION: If you use an extension cable on the USB or HDMI terminal block, install the cable clamp to prevent the connection from being disconnected or sparking because the cable is disconnected.


(1) Put the cable connector into a cable clamp as below image

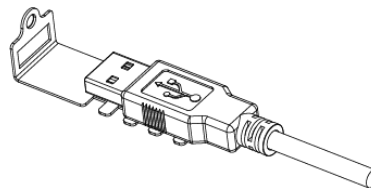


(2) Fix the connector in a cable clamp as below image.

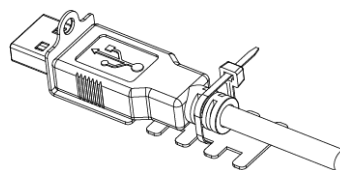

(3) Insert the connector into USB terminal block as below image.

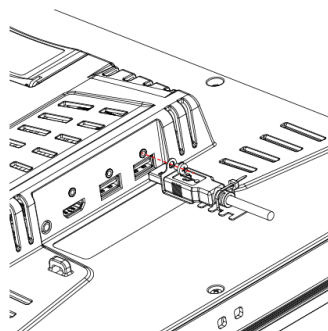

(4) Fix the clamp with a screw as below image and check the status of fixing.

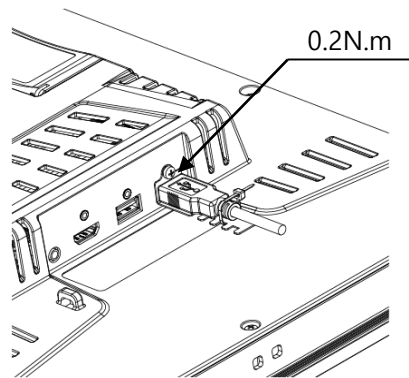

Chapter 8 Maintenance Warning

8.1 Cleaning the Display

When the surface or frame of the display become dirty, spray the cleaning solution onto a soft cloth and wipe the device. Do not spray the cleaning solution directly onto the device.

8.2 Periodic Check Points

Check the followings periodically for best condition of the device.

(1) Environment

- a. Is the operating temperature within the allowable range (-10~50°C)?
- b. Is the operating humidity within the allowable range (10~80%RH)?
- c. Is the Surrounding pollution no corrosive gas?

(2) Power

- a. Is the input voltage within the change range?

(3) Related Items


- a. Check an internal battery when an exchange or voltage drop is displayed.
- b. Check the guarantee duration of LCD Backlight by eye.
- c. Check the touch pad there is no damage, scratch or pollution by eye.

8.3 Problems with the Device Warning


- a. If there is a problem during operation, stop using it and contact the A/S department of M2I Corporation, which is indicated on the product label.
- b. Only the authorized worker from M2I Corporation can check and repair problems related to malfunction of the machine.
- c. If the problem cannot be solved at the installation site, the equipment can be collected and moved to M2I Corporation.
- d. The manufacturer, M2I Corporation, is not responsible for damage or malfunction of the equipment caused by the use conditions of the user beyond the installation and use standards described in the manual.
- e. If there is a high electromagnetic noise, put ferrite core on main power cable and field cable. The noise of power cable and communication cables can be high under the installation circumstances.
- f. Please put ferrite cores on each side's end when USB or HDMI is not working by noise.

8.4 Setting System Recovery Mode



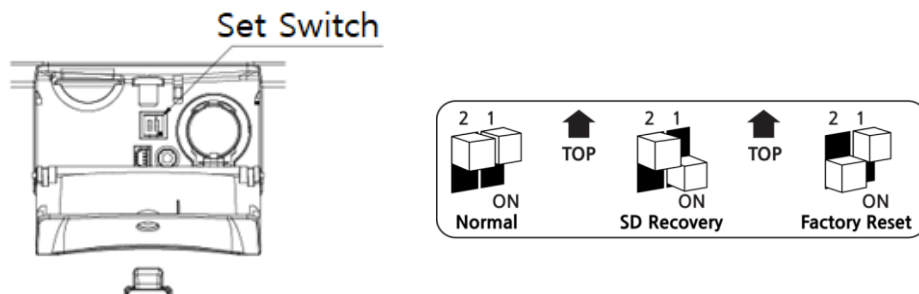



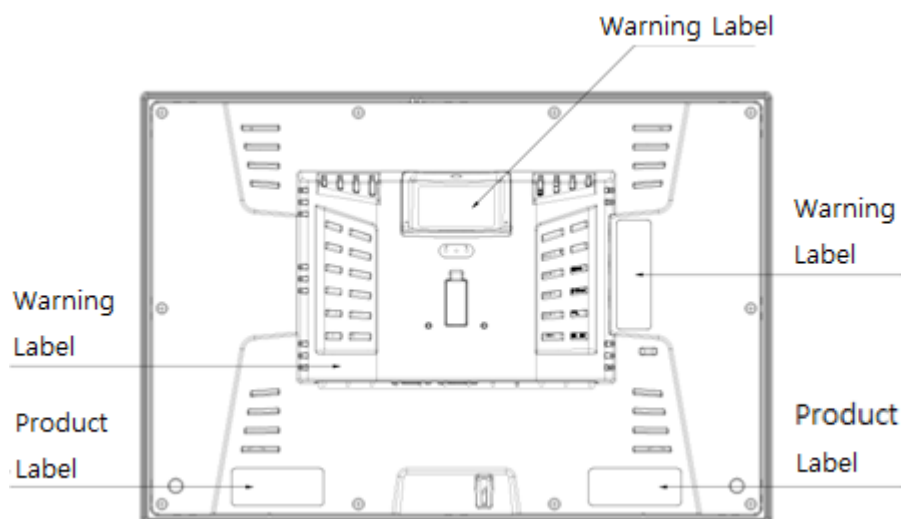

- If the system fails to boot normally due to a problem during operation, the built-in recovery function can be used to maintain the factory default state. Please note that the built-in project will be deleted when using the recovery mode.
- After opening the rear cover, you can adjust the setting switch. Keep the "Normal" state when booting normally. If the system is recovering, turn off the power and set it to "Factory Reset".
- When the recovery is completed, the buzzer sounds, then turn off the power and reset to "Normal" state.



Chapter 9 Products and Warning Label Location



Chapter 10 Product Label and Warning Label

*Model Manufacturer	→	TOPRTxxxxWD-Ex Industrial HMI Touch Panel 工业操作终端 M2I Corporation Made In Korea / 韩国制造
**Power	→	S / N (产品系列号) : M2I Bldg, Simin-daero 327, Anyang-si, 14055 +82-31-465-3366 IN(输入) : 20 ~ 28V \equiv Class2, XX W Inside Cell(内部电池) : CR2032(Lithium)/Panasonic Tamb (使用温度) : $-10^{\circ}\text{C} \leq T_a \leq +50^{\circ}\text{C}$ Ingress Protection(入口保护) : IP54(Front/正面), IP2X(Rear/背部) ⚠ If you need change the inside battery please contact the A/S center WARNING-POTENTIAL ELECTROSTATIC CHARGING HAZARD ⚠ See Instructions ⚠ For use on a flat surface of a Type 1 Enclosure Service & Support www.m2i.co.kr V
Battery	→	
Operation Temp	→	
Cautions	→	 <ul style="list-style-type: none"> - 电压确认! DC20~28伏专用 - Check the input voltage! DC20V~28V. - 입력 전압 확인! DC20V~28V. - 电源的电压超于产品的额定电压, 产品可能会被破坏. - If the voltage exceeds the rated voltage of the unit, the unit may be damaged. - 사용할 전원의 전압이 기기의 정격 전압을 초과하면, 제품이 파손될 수 있습니다. WARNING – DO NOT CONNECT OR DISCONNECT WHEN ENERGIZED. or equivalent. AVERTISSEMENT-NE PAS CONNECTER OU DÉCONNECTER LORSQUE L'ÉQUIPEMENT EST SOUS TENSION.
***Certificates / Protections	→	 R-R-M2I-ORT1550WD  Ex ec IIC T6 Gc KGS 2x-Gaxxx-xxxxX  II3G  Ex ec IIC T6 Gc UL25ATEX3246 X IECEx UL 25.0049X  E526919 PROG.CNTRL Class I Division 2 Group A,B,C,D T6 Haz.Loc  Ex ec IIC T6 Gc 

*Model Name **Power Specifications:

- TOPRT1550WD-Ex: 24Vdc, 40W, Class 2 Power Only
- TOPRT1950WD-Ex: 24Vdc, 40W, Class 2 Power Only

*** These can be different depends on each model. Before model selection, make sure the details to M2I.

Copyright: M2I Corporation 2025.04

www.m2i.co.kr

Doc.No.: TOPRT(W)-Ex -D0004 Rev.0

- Please read related contents in this manual when you use M2I product, and operate the product staying safe with appropriate handling.
- This manual should be stored in secured and appointed place so that it can be read in any needs.